
High Back Conference Chair

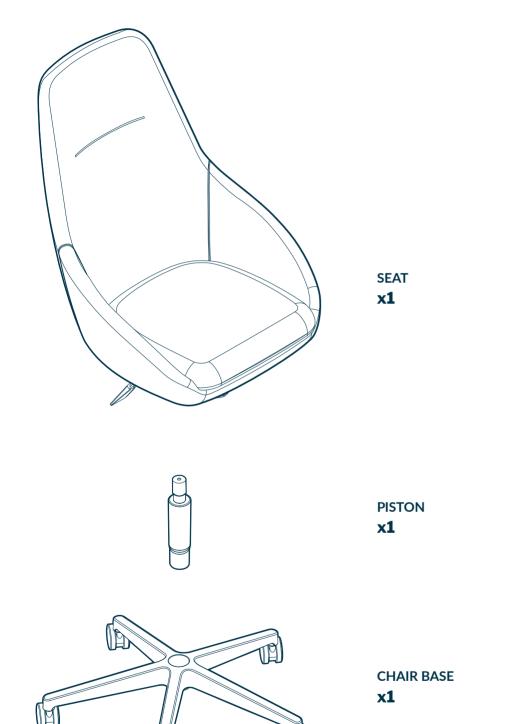













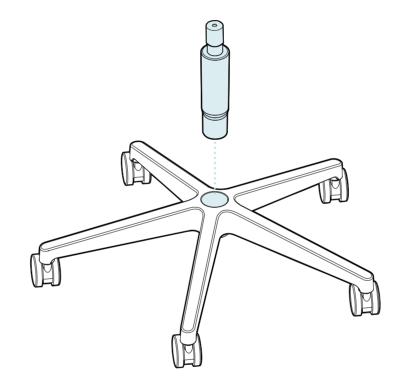

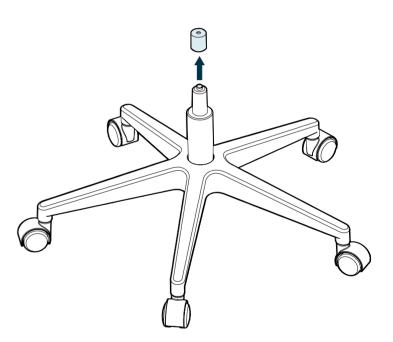


Place the piston into the center of the base with the smaller end pointed up.

Remove the piston cap cover.







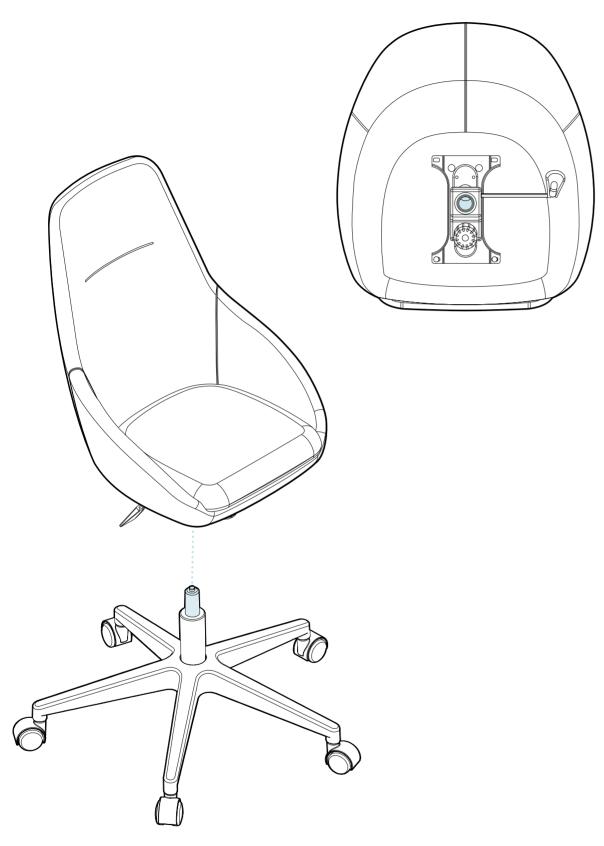

With assistance, take the chair seat and place the highlighted section of the mechanism onto the highlighted section of the piston.



To adjust seat height, use the lever under the right side of the chair seat.

To adjust how easily the seat reclines, turn the knob under the front of the seat clockwise to increase tension and counter clockwise to decrease tension.